



3D Adjustable Concealed Hinge MODEL NO. KCH4055

NOTE:

1. For indoor use only, not suitable for areas where it can be direct contact with water.
2. Please check with manufacturer in advanced if use with a door closer in order to make sure correct use.
3. The door is possible could not close if the door is deformed.
4. Need to check the screw at regular time to make sure it is fixed.


COMPONENT PARTS

- *Concealed Hinge 2 pcs
- *Cover 8 pcs(door side x 4, frame side x 4)
- *Screw (Sx30) 8 pcs
- *Allen wrench S4 1 pc
- *Installation Manual 1 pc

ADJUSTMENT


Vertical	±2mm
Horizontal	-2mm, +3mm
Depth	±1mm

HINGE PARTS

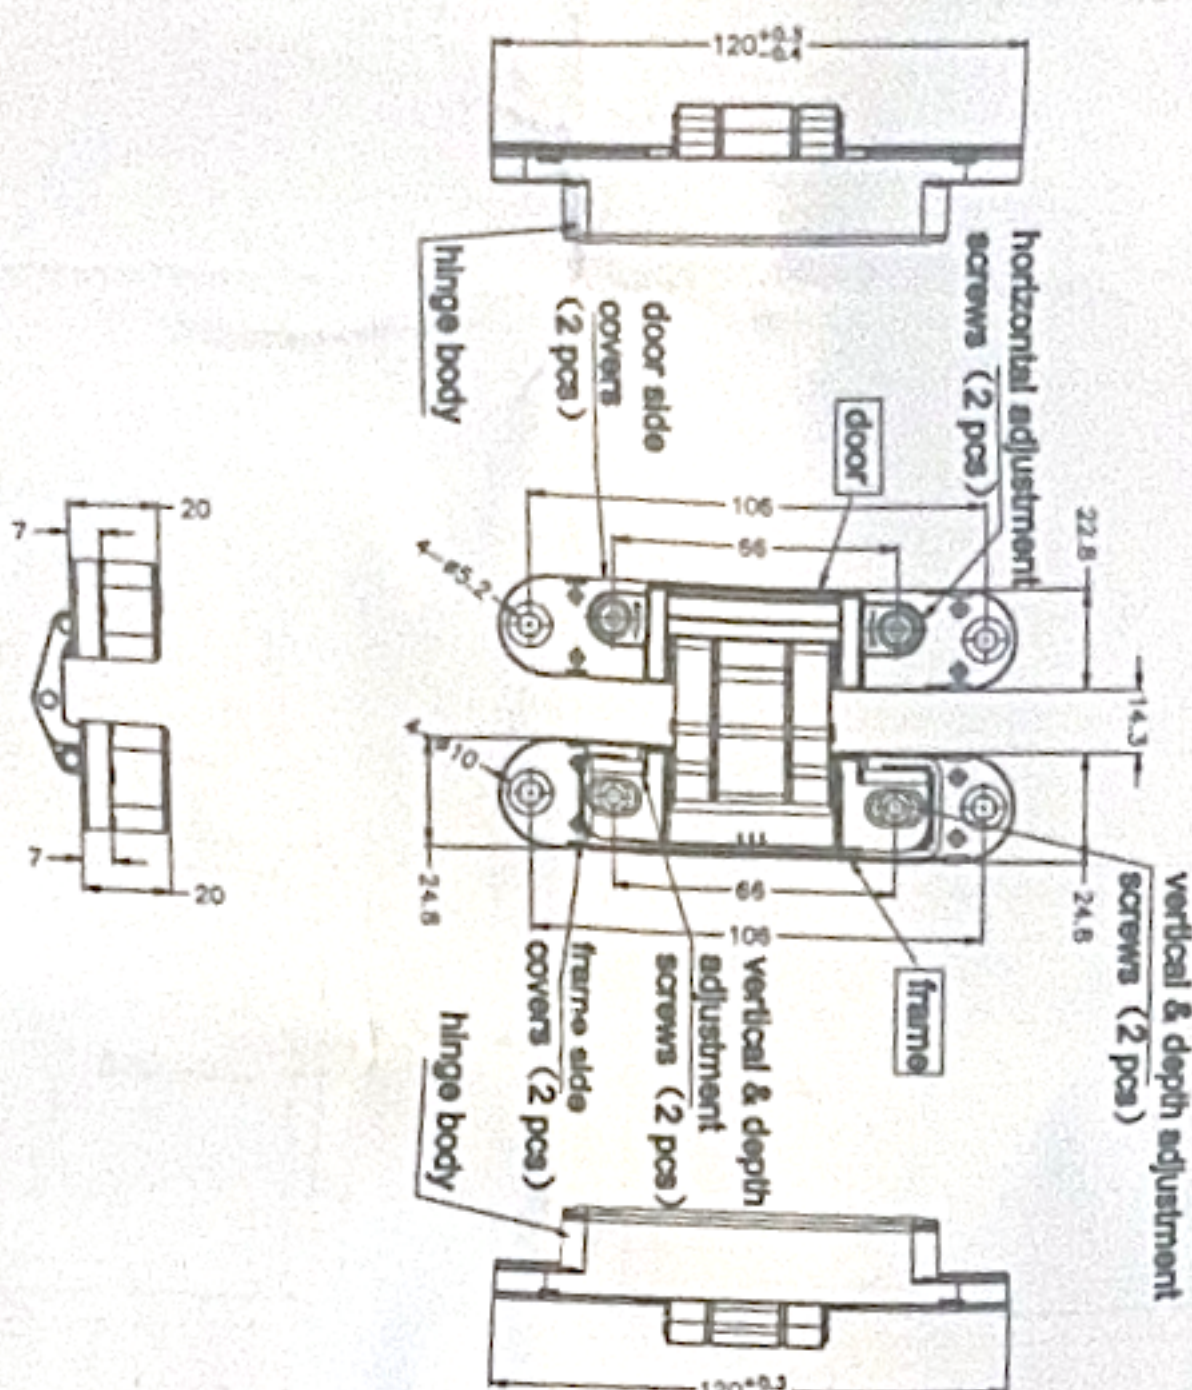


CUT OUT DRAWING

NOTE: The edge of door and frame need to be supplied with C1 or R1 processing, (refer to "A" in the drawing)

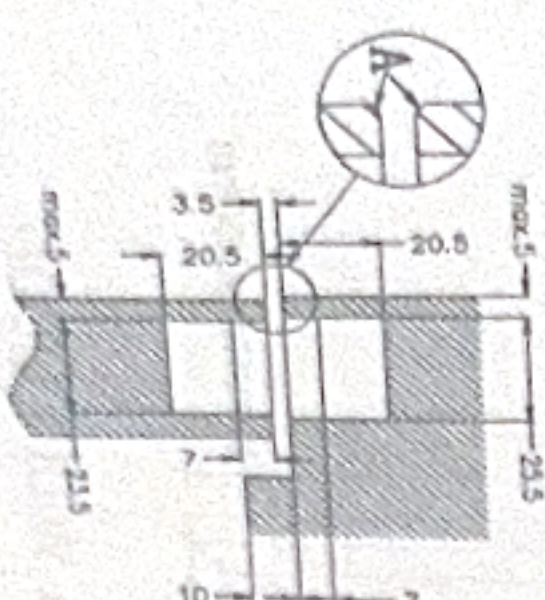


cut out drawing for
door side


cut out drawing for
frame side

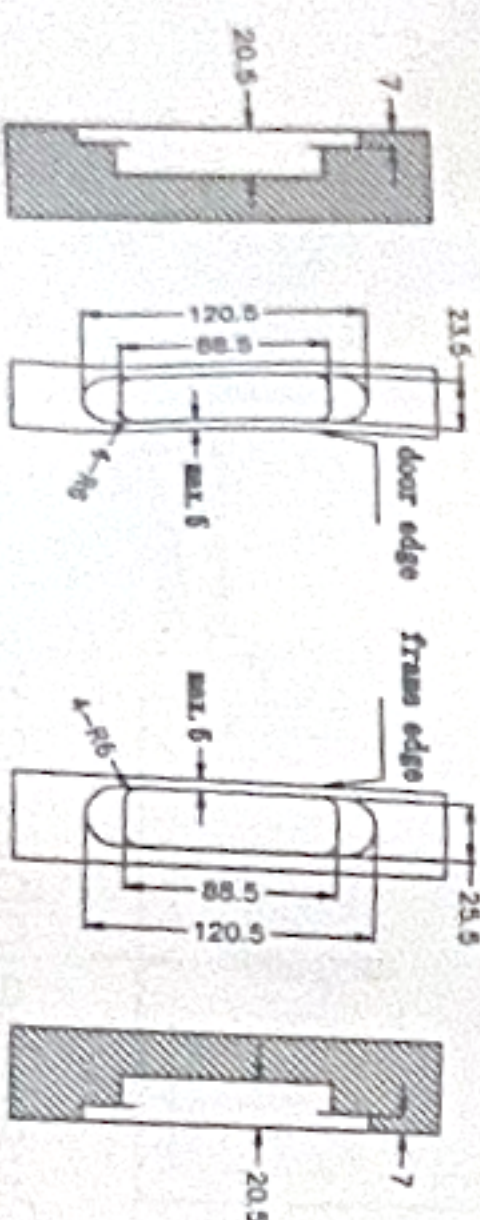

a. HINGE DETAIL

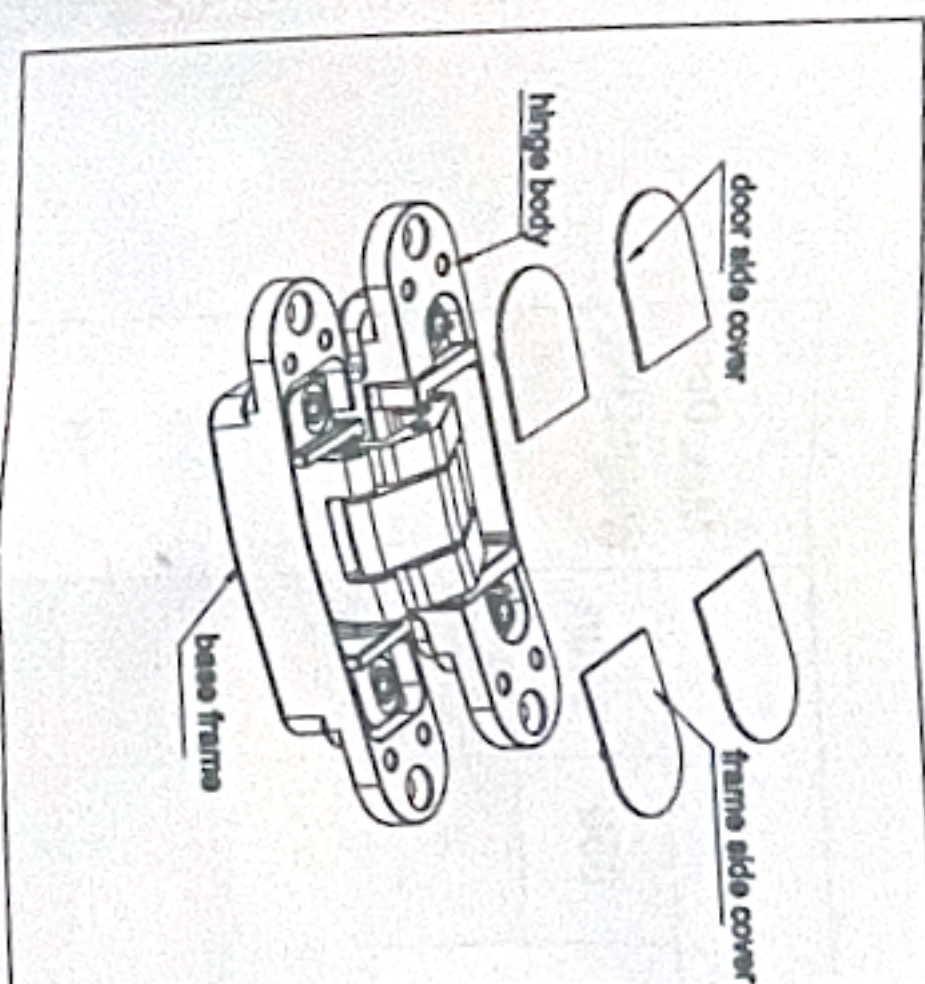

b. INSTALLATION

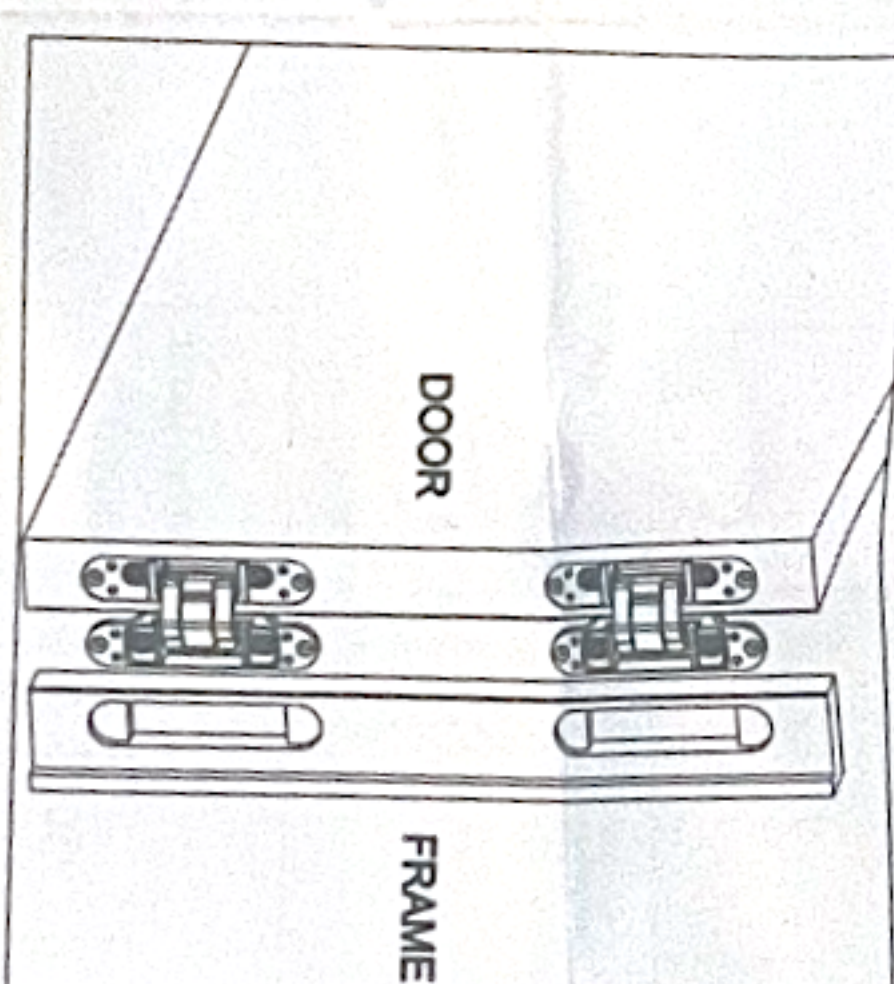

INSTALLATION STEP:

1. Refer to figure a, remove the covers from hinge.
2. Install door side parts into door cutout position.
3. Refer to figure b, temporarily hang the door by inserting both upper and lower frame parts into the frame cutout position at the same time.
4. Make sure all screws are fixed after installation.

NOTE:

1. Make sure the hinge body is installed in correct position on door and frame.
2. Do not open/close with excessive force, or door may fall down.

ADJUSTMENT STEP:

1. Vertical adjustment
Loosen vertical & depth adjustment screw one turn with allen key to adjust. Then tighten screws once the door in proper height.
2. Depth adjustment
Loosen vertical & depth adjustment screw one turn with allen key to adjust. Then tighten screws once the door in proper position.

NOTE:

1. Recommended fastening force for vertical and depth adjustment is 3N.m(30.8kgf.cm).
2. To prevent door falling, do not remove vertical adjustment screws.

3. Horizontal adjustment

Turn the horizontal adjustment screw in clockwise direction to widen the gap between door and frame. To narrow the gap, turn the screw in counter clockwise direction.

NOTE:

1. Gently turn horizontal adjustment screws for upper and lower hinge at the same time, do not force turning of screws.
2. Do not loosen the horizontal adjustment screws in clockwise direction over than 3mm, or door may fall.

4. Finally, install all covers.

NOTE:

1. Do not handle the covers with excessive force or they may break.